




# OPD NURSE CALL SYSTEM

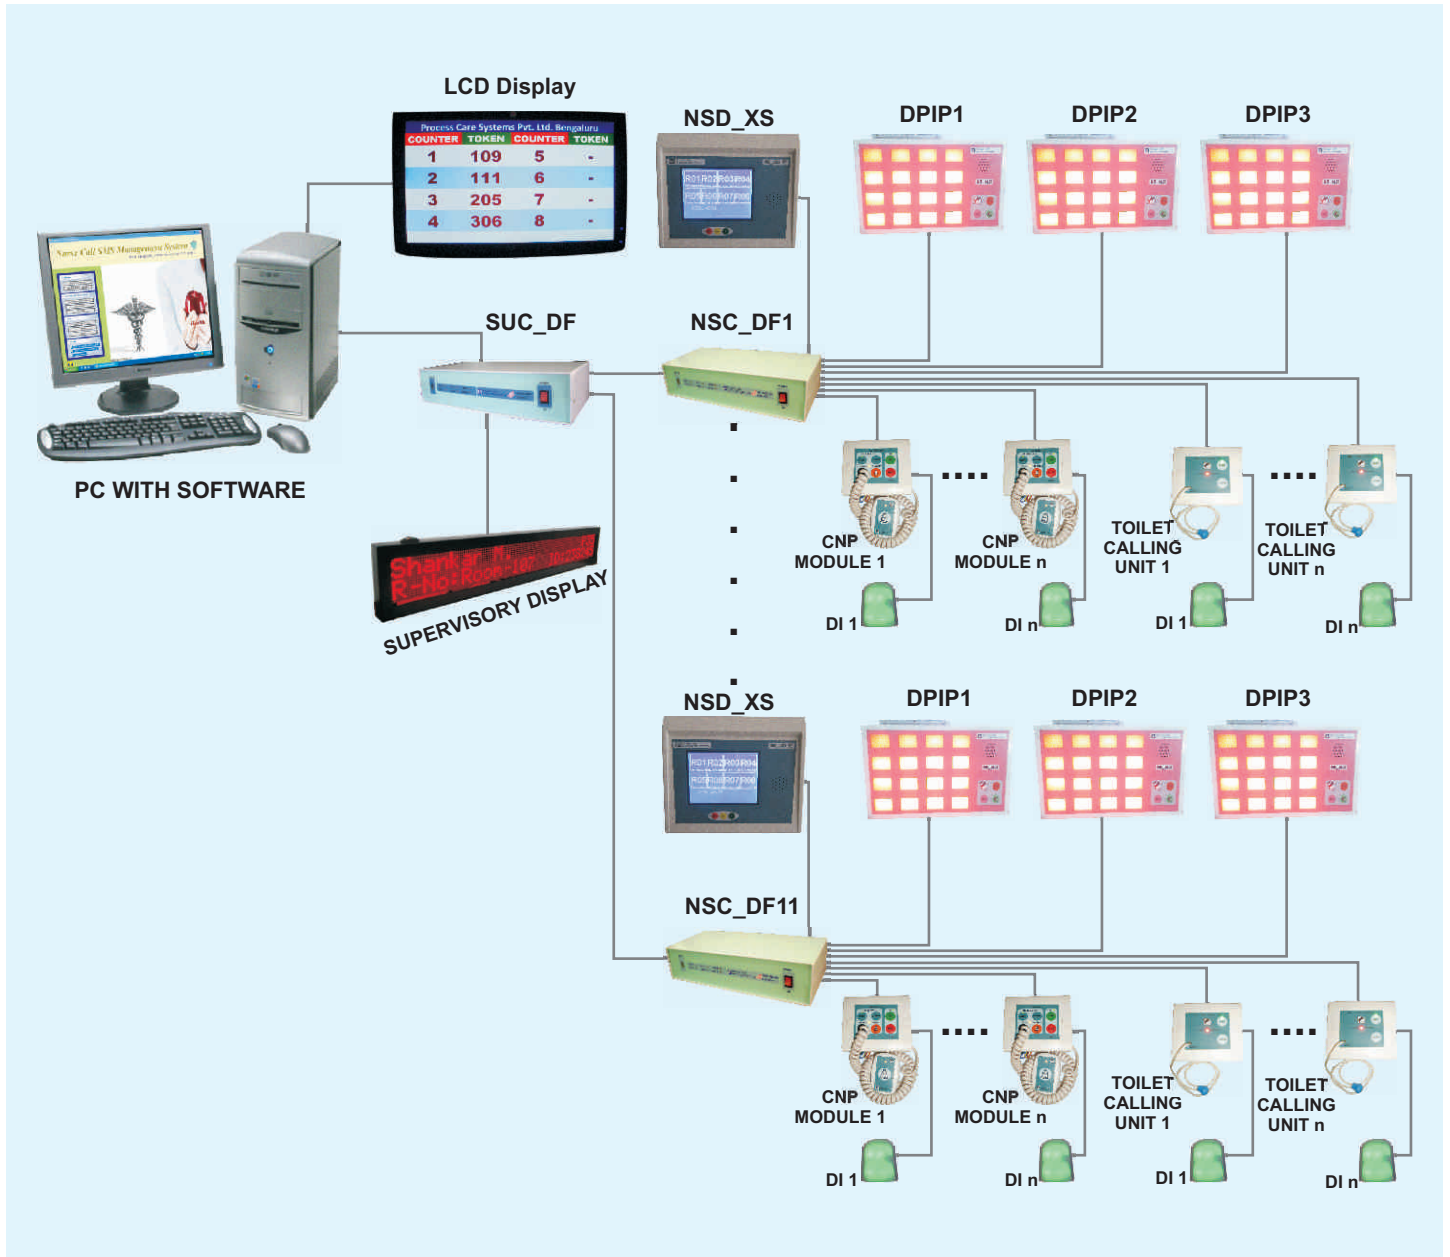

The system is designed to help consulting Doctors working from their OPD rooms to call Nurse for any help. The system also allows for Doctors' presence indication both on a common panel at Nurse station and on the Door indicator individually.

**CNP MODULE (DFRU)**



**TOILET CALLING UNIT (CCTU)**



• The system consists of Dual Function Nurse Station Controller (NSC\_DF), two types of displays (static LED windows and dynamic LCD display), CNP Module (DFRU), Toilet Calling Unit (CCTU) and a Door Indicator (DI)  
 For enhanced features like call forwarding, call escalation and centralized display following modules can be added to the system

- Dual Function Supervisory Controller (SUC\_DF)
- Supervisory Display

The static LED display is made use of to indicate doctor's presence (up to 3 of 16 window panels) while the LCD display is made use of for Nurse Call indication.

CNP Module (DFRU) has two sets of keys to perform nurse call function and inputting doctor presence.

Toilet Calling Unit (CCTU) has 2 keys and a pull cord to perform nurse call function.

Similarly Dual Door Indicator also serves two purposes namely: Doctor's presence is indicated by lighting up the Door indicator in Green color while the absence is indicated in Red color. If a nurse is requested for, the Door indicator is made to flash in Amber color.

If LCD TV and management information is required then the PC has to be added to the system. The LCD TV can be made use of both for Nurse Call and Doctor's Presence indication.

Optional Supervisory Display can work in the absence of PC for indicating call escalation.

## HEALTH CARE COMMUNICATION PRODUCTS:

- ❖ Nurse Call System - *Enterprise, Esteem\_GSM, Esteem\_SLK*
- ❖ OPD-Q Management System
- ❖ Token Management System
- ❖ GPS based Smart Announcement Clock
- ❖ Hospital Information Display System
- ❖ Operation Theatre Parameter Display
- ❖ Code Blue Alert System

Visit our website [www.datacareindia.com](http://www.datacareindia.com) for entire product range

Head Office :



**PROCESS CARE  
SYSTEMS (INDIA) PVT. LTD.**

No. 12, 1st Floor, 2nd Block, KIADB Industrial Complex, Plot No. 488,  
14th Cross, 4th Phase, Peenya Industrial Area, BENGALURU - 560 058.

Tel : 91 80 4352 1111 / 97319 00027 Fax : 91 80 4352 1140

E-mail: [info@datacareindia.com](mailto:info@datacareindia.com) Website: [www.datacareindia.com](http://www.datacareindia.com)

Contact Information for Branch Offices

Ahmedabad: 76007-93707

Chandigarh : 78378-94792

Chennai : 98400-79016 044-6499 0968

Cochin : 97441-04999 0484-653 1594

Delhi : 95605-09872 011-2223 4178

Hyderabad : 96426-32244

Mumbai : 98202-17094

Lucknow : 1800 103 3282

**TOLL FREE No.: 1800 103 3282**

Doc. No. : PCS/CAT/OPD\_NCS 1215